


# Pendleboard Foot Mast Kit

Draw circle 8 cm diameter and cut with scissors



Take off the EVA with a screwdriver, heating up with a hair dryer can help

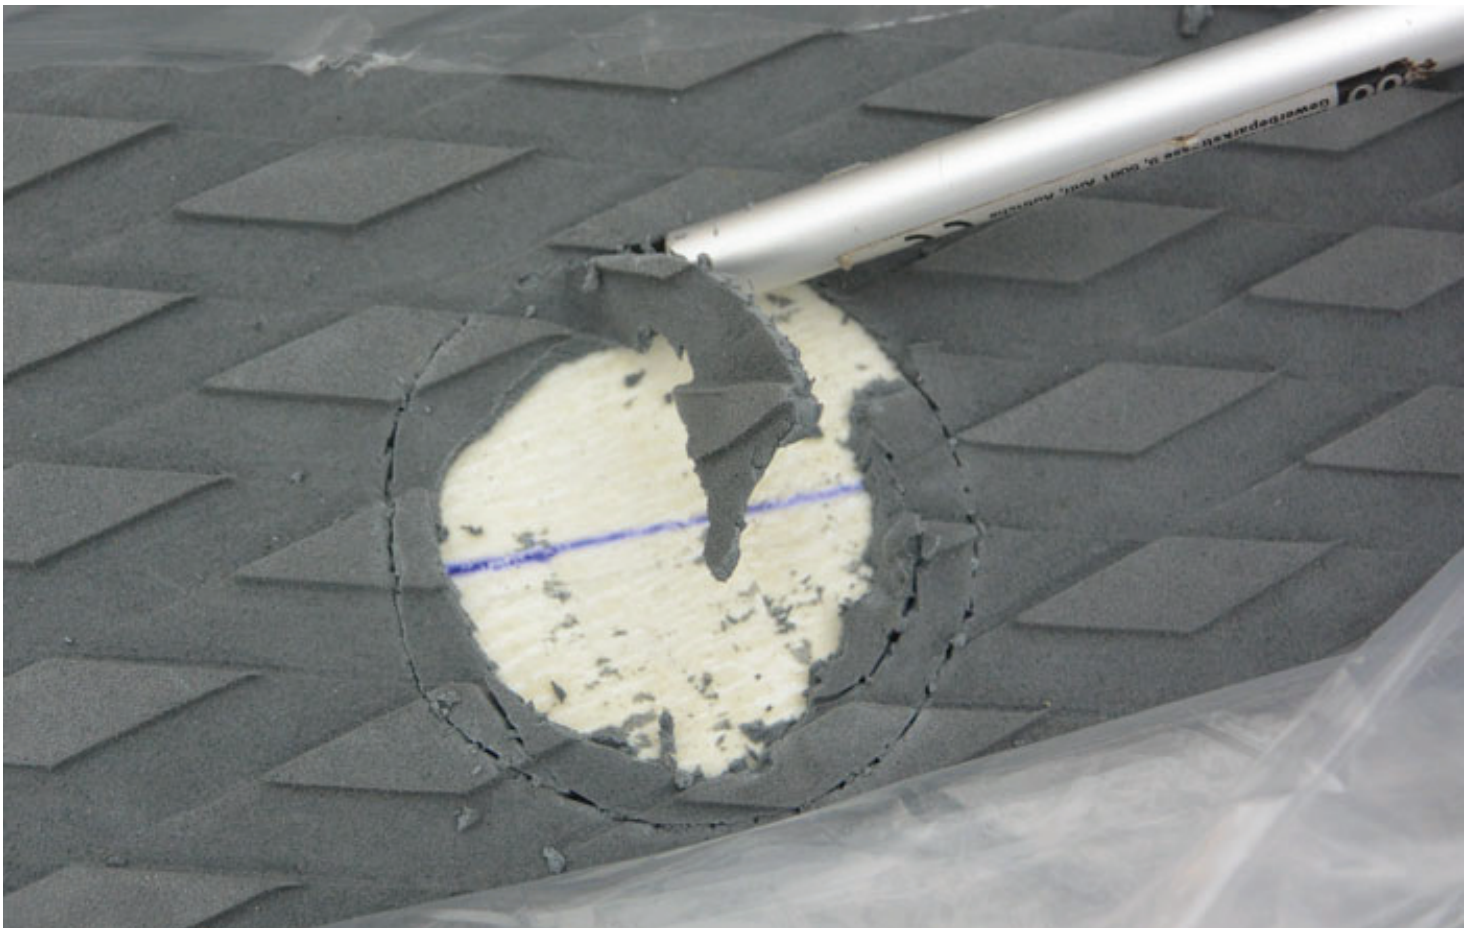



Clean off the glue with acetone



Put on board and foot mast base one layer of inflatable boat glue you can find in boat shop.

Glue Link:


<http://www.bigship.com/catalogue/entretien/restauration/colle/soromap-nauticolle-22-colle-pu-pneumatique-250cc>



Glue on bottom side off foot mast base



Top view off foot mast base

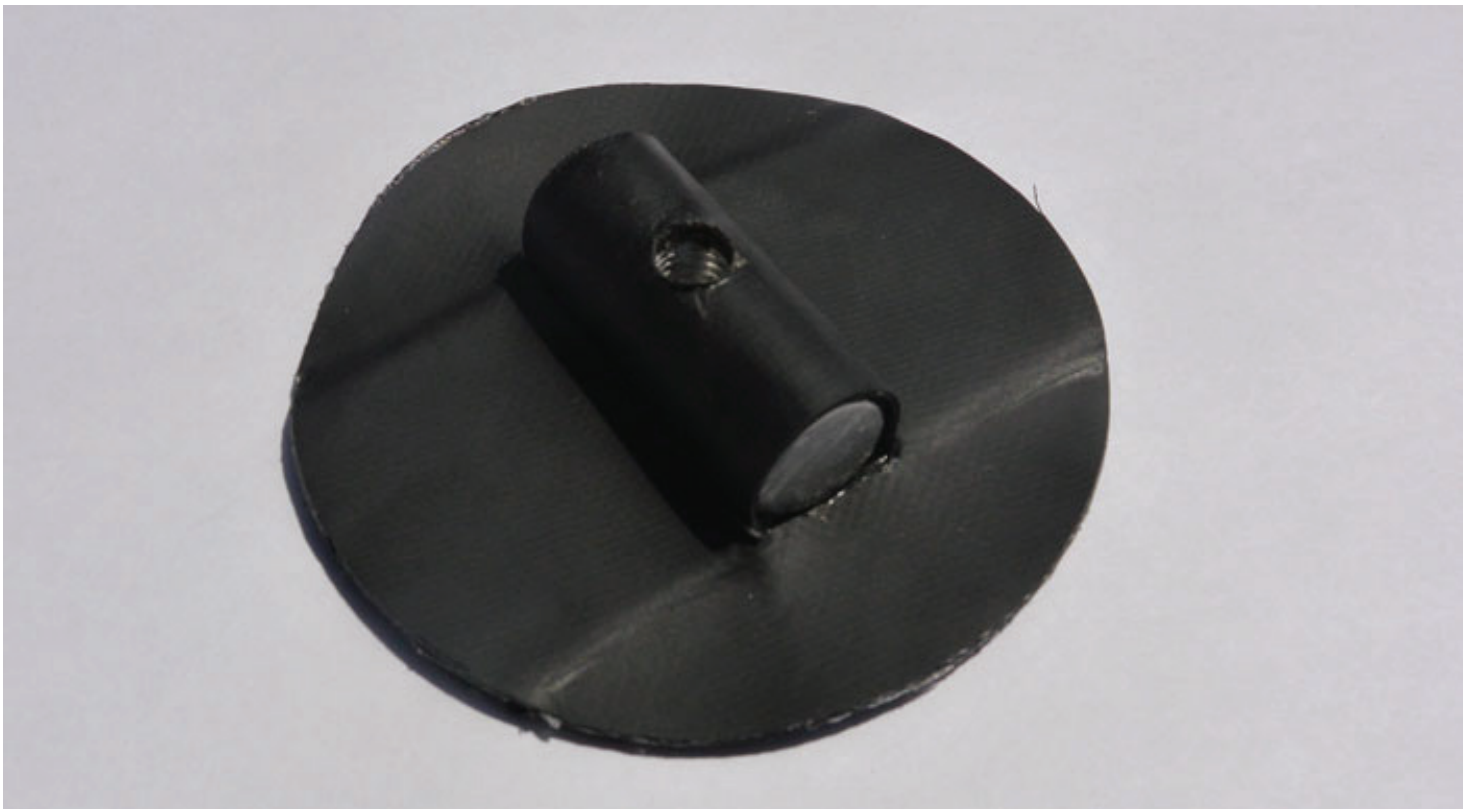



Glue on and apply pressure with metal or hard plastic scraper, also apply heat with hair dryer.



The aluminium part with 8 mm standard foot mast thread can be removed when not being used as Wind Sup





EVA Spacer



Screw on your Foot Mast Plate

